




MULTIPLEXER OUTPUT (Front View)

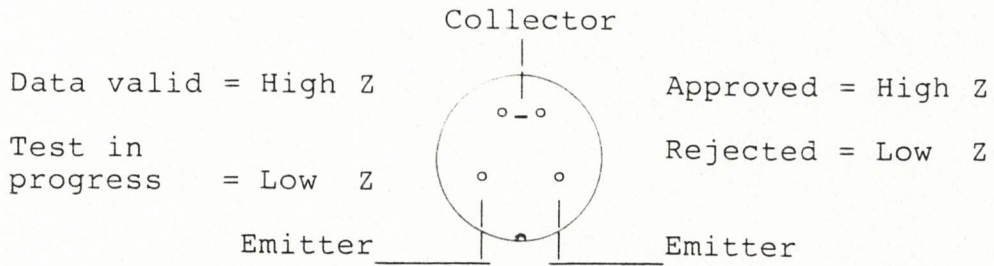

25 PINS CONNECTORS

PRINTER

ANALOG I/O

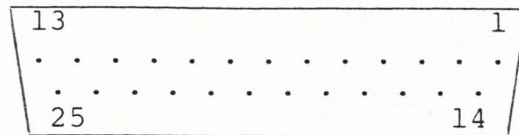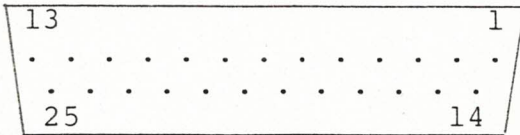

Pin No.	Signal	Printer	Analog I/O
1	No connection		
2	Transmitted data (TD)	x	
3	Received data (RD)	x	
4	Request to send (RTS)	x	
5	Clear to send (CTS)	x	
6	No connection		
7	RS 232 ground	x	
8	+ 15 volt		x
9	- 15 volt		x
10	Back panel setting "2"	x	x
11	Generator active (ON)	x	x
12	Filter OUT B-		x
13	Analog ground		x
14	Automatic mute		x
15	+ 5V DC		
16*	Generator OUT +		x
17*	Generator OUT -		x
18*	Generator IN +		x
19*	Generator IN -		x
20	External filter B-		x
21	External filter B+		x
22	Back panel setting "1"	x	x
23	Back panel setting "4"	x	x
24	Filter OUT B+		x
25	Digital ground		x

* Remember to use shorting plug when a compressor (or other option) is not connected. The shorting plug connects pin 16 to pin 18 and pin 17 to pin 19.