UA-25 Installation on Windows 11

UA-25 drivers for Windows 11 is made due to the product are not made any more.

You can find drivers on Roland home page for win XP, win vista, win 7 and win 10 however not for win 11.

To install a driver for UA-25 you need to download UA25_win7_x64_v100.zip and UA-25_win_vista_x64.zip files. You can find those files on Roland homepage or at www.kk-int.dk under download->old->p730.

Unzip the download files and store the files on your hard disk.

Do following steps:


Go to the location where you have saved your UA25_win7_x64_v100 file.

== Files	26-03-2023 13:25	File folder	
Teadme Readme	26-03-2023 13:25	File folder	
Readme.htm	08-01-2015 15:43	Microsoft Edge H	2 KB
Setup.exe	08-01-2015 15:43	Application	5.593 KB
Uninstal.exe	08-01-2015 15:43	Application	530 KB

Important be sure the USB cable is disconnected to the UA-25.

Run the "Setup.exe" file.

You get the UA-25 Driver Setup menu.

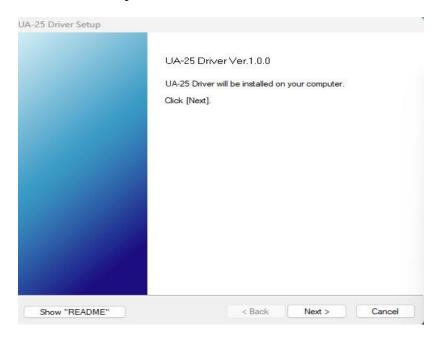


Then click on "Next".



Then click on "Next" again.

Now you get following picture.


Important do not connect the USB cable

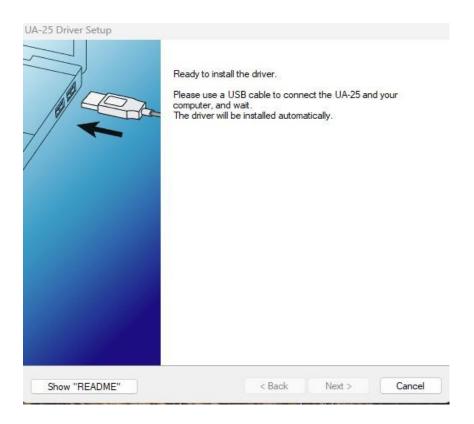


Now click on "Cancel".



Click on "No" else the program uninstall the driver you just installed.

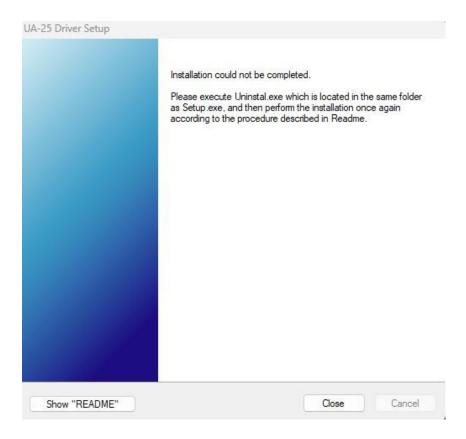

Then "Close".

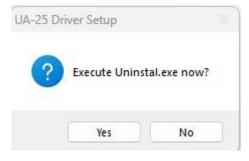

Then click on "No".


Now open the Device Manager. You can use the Search field and write "Device Manager".

Connect your USB cable to the UA-25 device. After few second you got under Other devices the EDIRIL UA-25 icon.




Right click on the EDIROL UA-25 icon.


Then you got the EDIRIL UA-25 Properties menu.

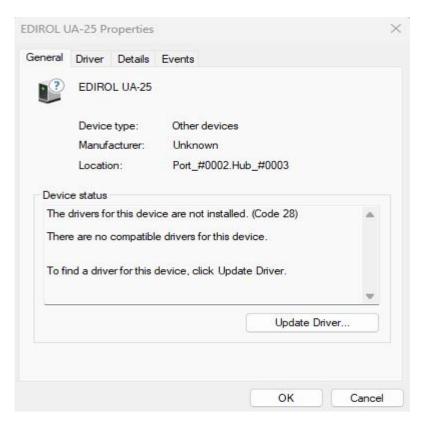

Then click on "Update Driver".

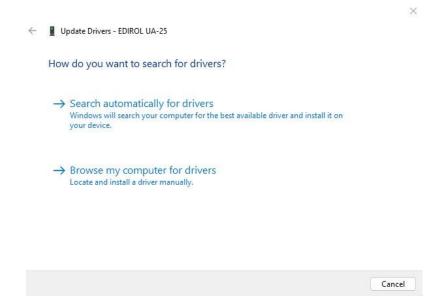

Select "Browse my computer for drivers".

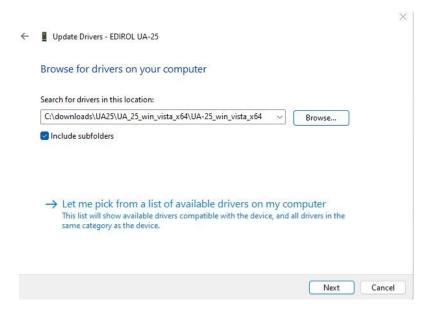

Browse for the place where you have stored the unzipped UA-25_win_vista-x64 driver. Remember to include subfolders.

Then click on next.

The driver will now be upgraded with the vista driver. After few second the light will turn on the UA-25 device.